




# 1- P.KRD.28.1

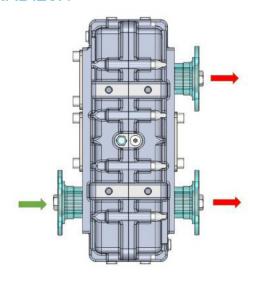


# 2- P.KRD.28.1.OILP

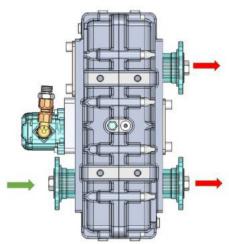


3- P.KRD.28.2

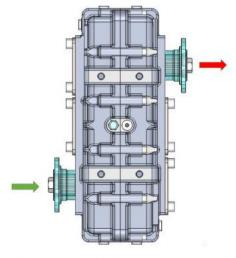


4-P.KRD.28.2.OILP

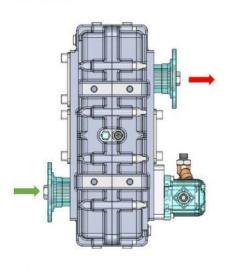

5-P.KRD.28.2.1.OILP

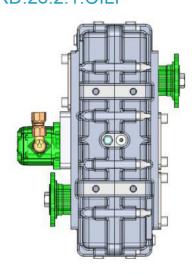


6- P.KRD.28.2.A

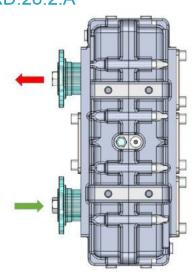







# 7- P.KRD.28.2.A.OILP

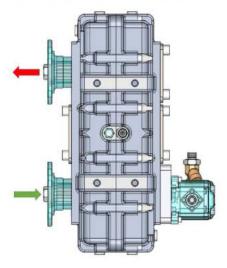


9- P.KRD.28.3.OILP

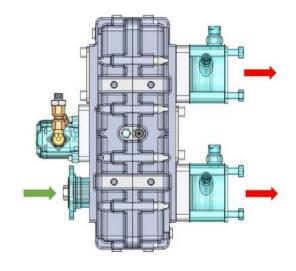


11- P.KRD.28.5.OILP

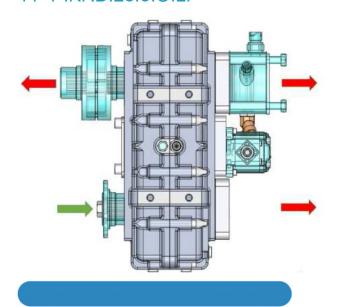


8- P.KRD.28.3

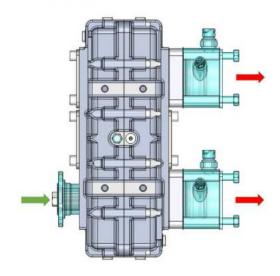

10- P.KRD.28.4.A

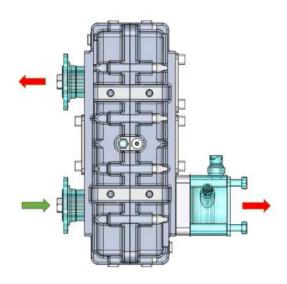


12- P.KRD.28.6

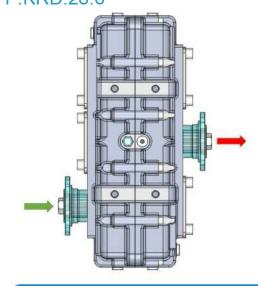







## 13- P.KRD.28.7

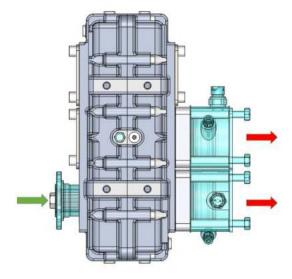


15- P.KRD.28.9.OILP

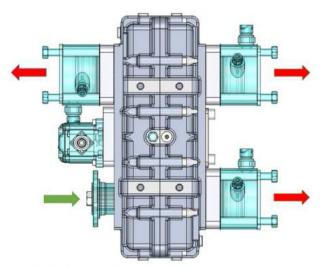


17- P.KRD.28.11.OILP

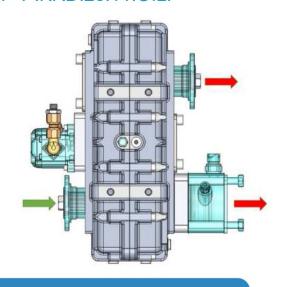


14- P.KRD.28.8

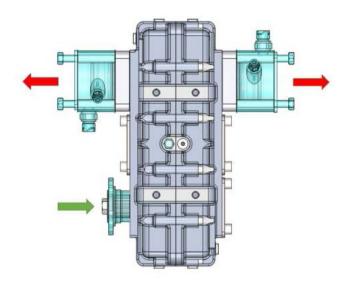

16- P.KRD.28.10.OILP

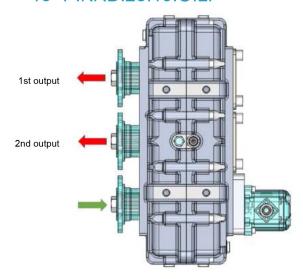


18- P.KRD.28.I

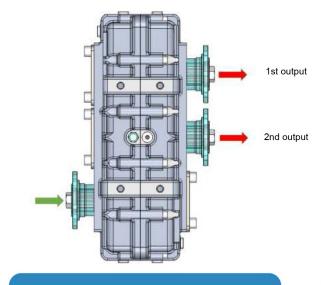







### 19- P.KRD.28.ISO

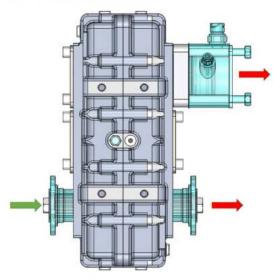


## 21- P.KRD.29

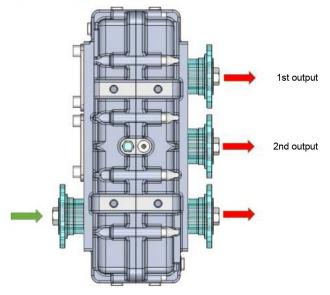


23- P.KRD.30.I

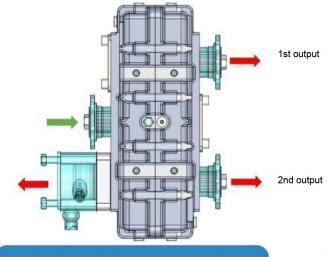


### 20- P.KRD.28.ISO.OILP

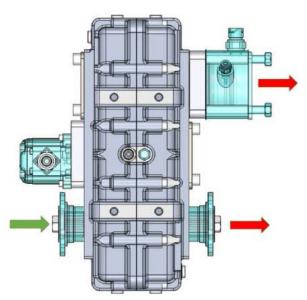

22- P.KRD.30

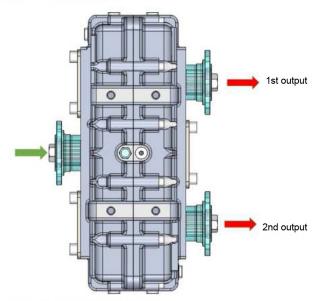


24- P.KRD.30.ISO

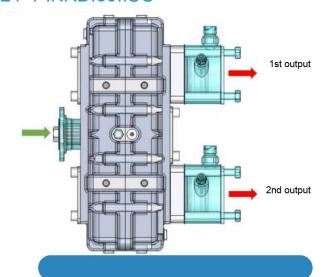





P.D01-06-027 : Body

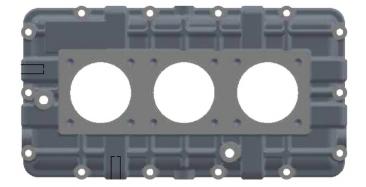

P.D01-06-028 : Cap

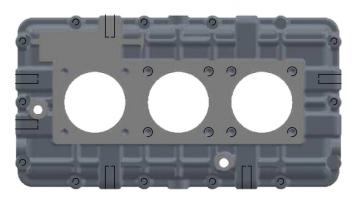


# **HORIZONTAL**

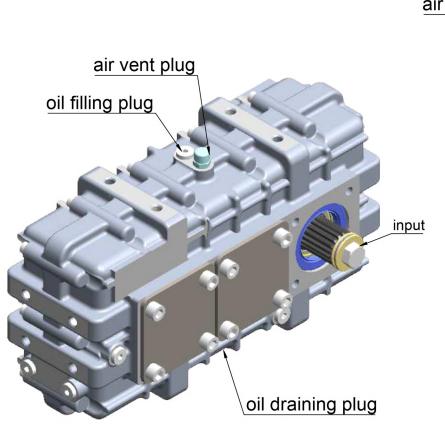


# vent plug air vent plug input oil draining plug



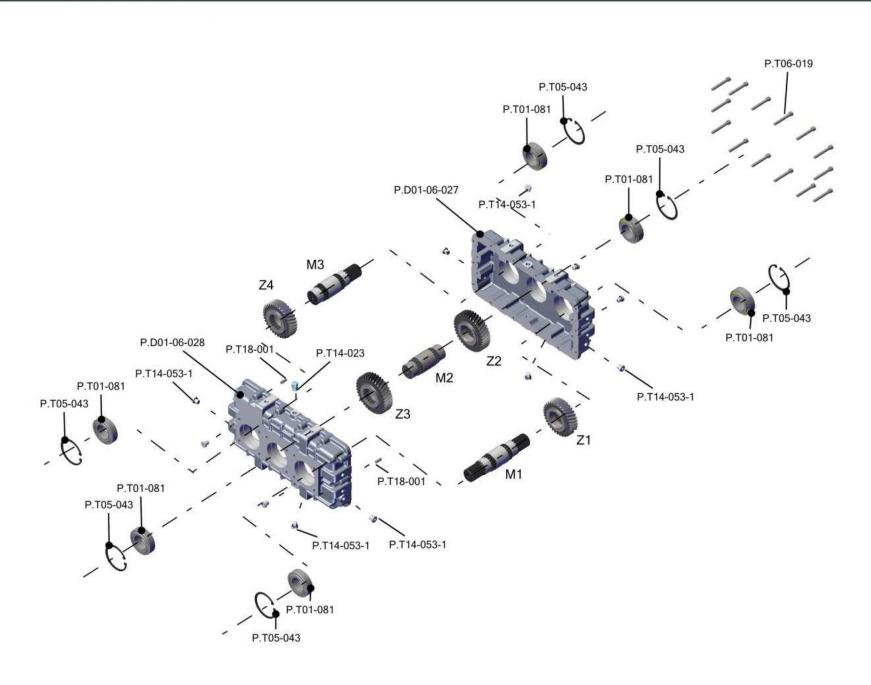




### **OUTPUT CONNECTION OPTIONS**

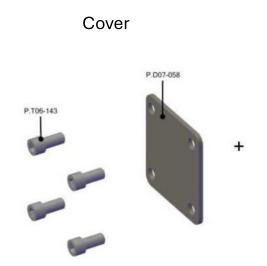

# Companion Flange Connection

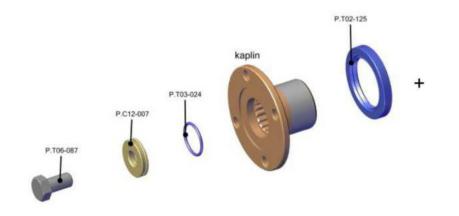

# Pneumatic Separator Connection



# **Lubrication Pump Connection**

